

Club Deluxe Off-Hand Stand Assembly Instructions.



Remove the camera mount hardware by taking out the screw. The camera mount will slide off of the tripod base. The Rifle Rest will fit securely on the mount post thus replacing the camera mount. Use the thumb screw to tighten the Rifle Rest once you have it at the desired position. There is no need to over tighten the mounting screw on the rifle rest, this screw is only needed to prevent rotation on the mounting post. You can save the camera mount hardware for later use.



Simply attach the wood cartridge block to the metal position master with the 2 screws that are provided. The wooden cartridge block has pilot holes drilled in the bottom to align it properly. When tightening the screws, make sure they are lined up properly with the pilot holes. Be careful not to over tighten the screws as this could strip the wood.